

MA-1-J-C Monitor Arm

Assembly Guide



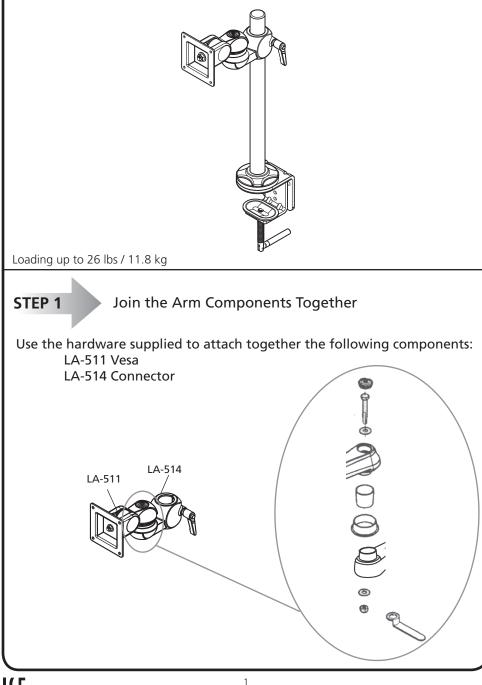

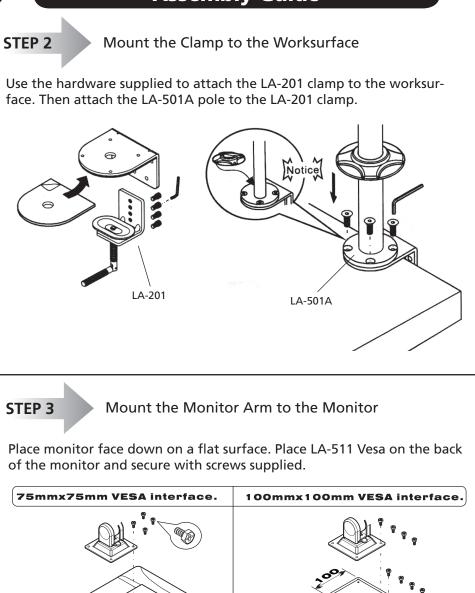

2

PJen


Assembly Guide

Assembly Guide

STEP 4

Mount the Monitor Arm to the Pole


Insert the arm (with monitor on already) onto the pole and position at the desired viewing height. Use the lever to tighten, or secure it with supplied screw. Insert pole cap onto pole.

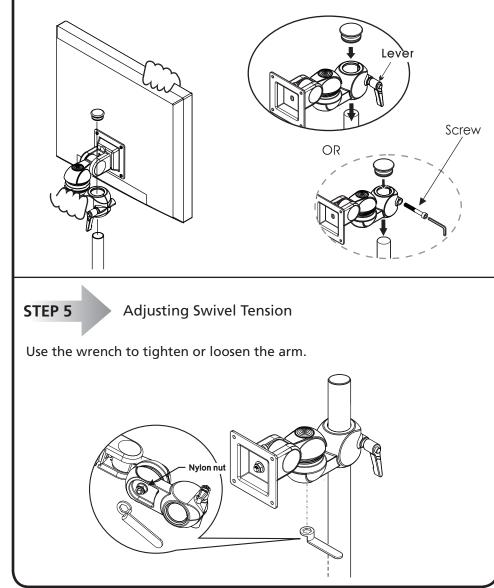

STEP 6

Adjusting Vesa Tension

When assembling the arm with monitors of differing weights, you may find that the tension of the vesa needs to be adjusted to maintain the desired monitor position. If so, adjust as follows:

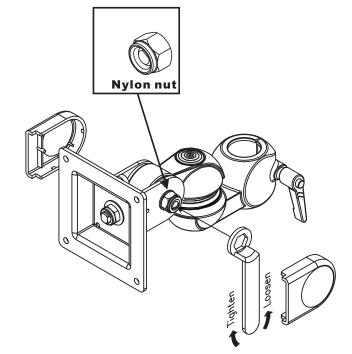

- a. Remove the two plastic vesa joint covers
- b. Find the nylon nut (not the screw head) and use the included wrench to adjust the tension.
- c. Use one hand to support the monitor and adjust the tension of the vesa.
 - Clockwise: more tension
 - Counterclockwise: less tension
- d. When the desired tension is achieved, replace the two plastic covers.

Caution:

- Support the monitor during the adjustment procedure.
- Only adjust the nylon nut (not the screw head).
- Do not disassemble the vesa.

3

4

