




# Installation and Assembly: Cart/Stand Adapter for Universal Rotaitional Mount




**Models: ACC170**

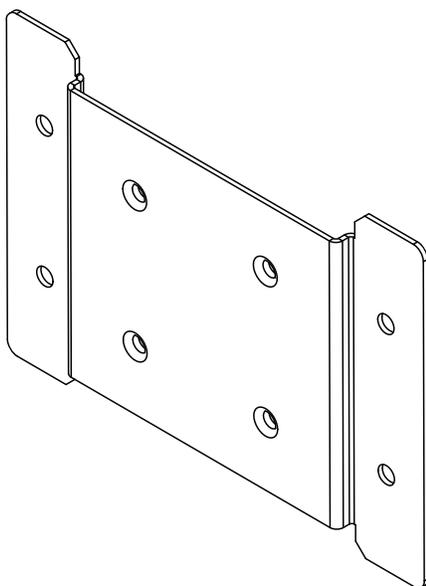

*Before you begin, make sure all parts shown are included with your product.  
Parts may appear slightly different than illustrated.*


## Parts List

Description	Qty.	Part #
<b>A</b> adapter plate	1	120-1179
<b>B</b> M10 x 15 mm round socket head screw	4	520-9262
<b>C</b> 6 mm allen wrench	1	560-9716

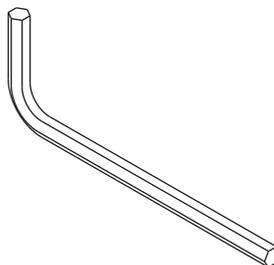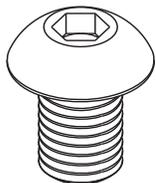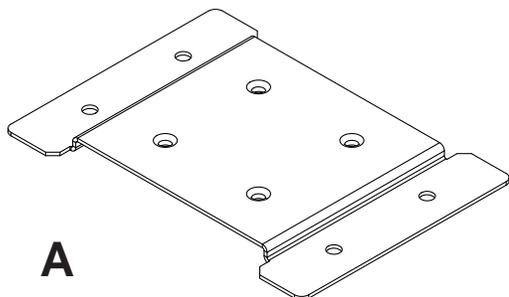

## Attaching Adapter Plate to SR Cart or SS Stand Hook Plate

- 1 Align inner holes of adapter plate (A) to inner holes of hook plate.  
From rear of hook plate, attach adapter plate (A) to hook plate using four M10 x 15 mm screws (B) as shown below.  
Tighten all fasteners with 6 mm allen wrench (C).

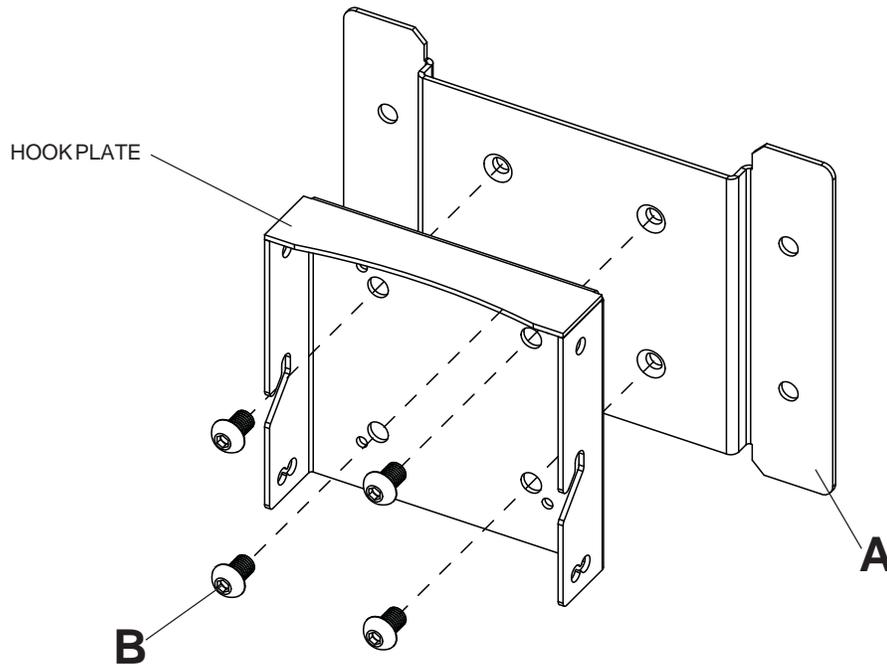

- 2 Attach adapter plate (A) to rotational mount using four M10 x 15 mm screws provided with rotational mount and securely fasten using 6 mm allen wrench (C) as shown below.  
**NOTE:** Reinstall hook plate to cart or stand according to instructions included with cart or stand.

