



STEP 7: CABLE MANAGEMENT

1. Route power and monitor cables through the flexible cable clips on the M8.1's upper link (B).

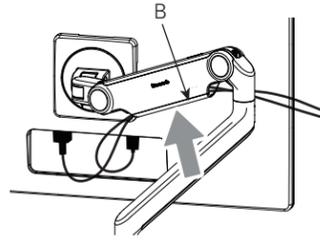


NOTE: Leave enough slack in the cables to allow arms to rotate without difficulty.


2. Slide the plastic cover (C) on the lower link upward to remove.

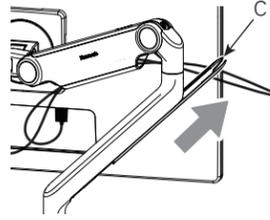


3. Using the two cutouts (D) as guides, run the cables over the lower link cover.

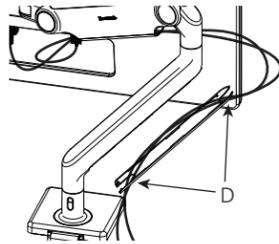

4. Lift the cover and cables up to the lower link, making sure that the cover sits flush with the surface of the arm.

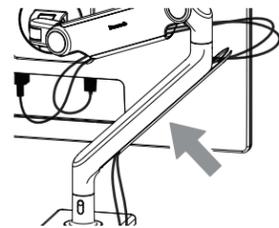

5. Slide the cover down the arm to lock in place, then gently pull the cables through the arm to remove excess slack.

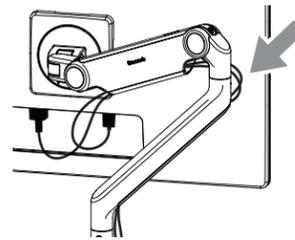

CAUTION: Don't insert extension cords. Don't insert any cord connecting one workstation to another.

M2.1 INSTALLATION HARDWARE




4 Standard VESA Bracket Screws




4 Plastic Spacers




4 Extended VESA Bracket Screws

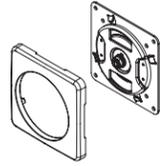

VESA Bracket and Cover

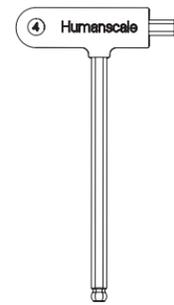

4mm Hex Key

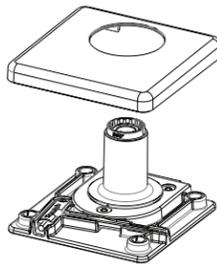

NOTE: 4mm Hex Key can be found under the plastic base cover.

Bolt-Through Mount



8mm Hex Key




Bolt-Through Plate





Bolt-Through Bolts

Sliding Desk Mount

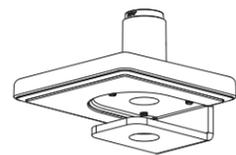

Clamp Mount

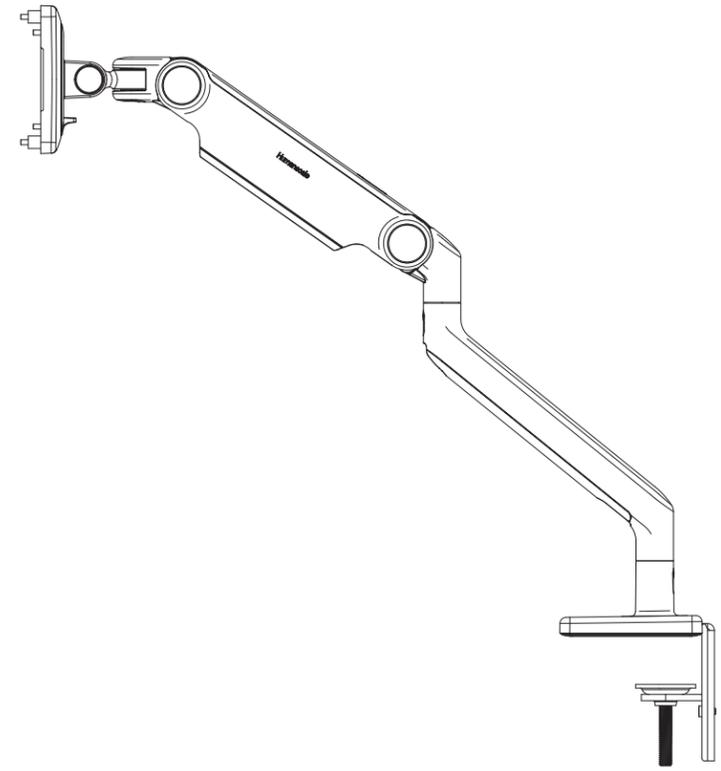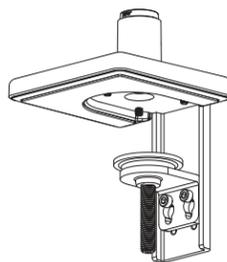

M2.1

Desk Mount Installation Instructions

GT-ID-IM-4751-001-R00

www.humanscale.com

For our terms and conditions please go to <https://www.humanscale.com/about/legal-information/terms-conditions.cfm>

© 2020 Humanscale Corporation. The text and artwork are copyrighted materials. All rights reserved. The Humanscale mark and logo are trademarks of Humanscale Corporation and are registered in the United States and certain other countries. The M2.1 trademark is owned by Humanscale Corporation.


STEP 1: ATTACH MOUNT TO WORK SURFACE

CLAMP MOUNT

NOTE: There are two sets of Bracket Screw holes to accommodate the thickness of every work surface. Use the upper holes for surfaces up to 1.8" (48mm) thick and lower holes for surfaces up to 2.7" (68mm) thick.

1A. For installation on open edge of work surface:


- Slide Mount (A) against work surface edge and fully tighten Clamp screws (B) with 4mm hex key (C).

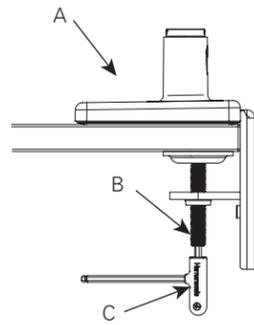

1B. For installation on work surface positioned against a wall or panel:

NOTE: This method can also be used to mount through grommet holes wider than 3"

- Detach the Bottom Clamp (D) from the Top Bracket (E) by loosening Bracket Screws (F) with 5mm hex key.
- Position the Top Bracket against work surface edge.
- Underneath the work surface, reattach the Bottom Clamp to the Top Bracket using the Bracket screws.
- Fully tighten the Clamp Screws (G) with 5mm hex key.

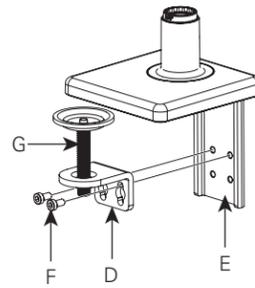


NOTE: Clamp Mounts cannot be used to mount the M2.1 to any vertical surface.

SLIDING DESK MOUNT

1C. For installation on a desk with minimal clamp clearance:

- Remove Base Cover.
- Loosely attach Sliding Desk Clamp (H) to base with three included screws (I). The screws should not be tightened all the way.
- Slide the base and clamp over the back edge of the work surface until the clamp rests on the edge.
- Fully tighten the three clamp screws to secure the base to the work surface.

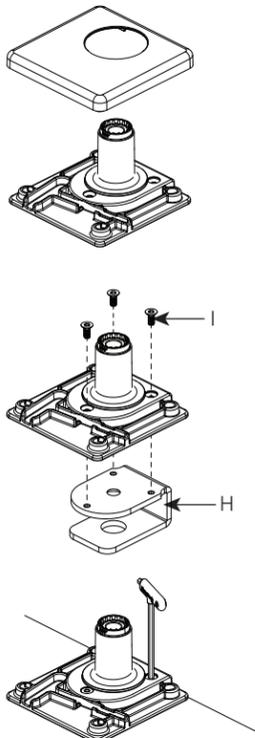

BOLT-THROUGH MOUNT


1D. For installation on work surface with no access for clamp system:

- Drill 1/2" hole through work surface in desired location.

NOTE: Bolt-Through Mount can accommodate a hole up to 4" (102mm) in diameter. If hole is 2" (51mm) or more, cables can be routed through the hole. For some 2" grommet holes, cables should be routed before installation of mount to accommodate cable plugs (cable access is approximately 1.5" x 0.25" with 2" grommets).


- Position the M2.1 Base over the work surface hole (J).

- Align Bolt-Through Plate (K), foam side up, under the work surface. Pass the Bolt (L) through the hole in the plate and screw into M2.1 base by using 8mm hex key.

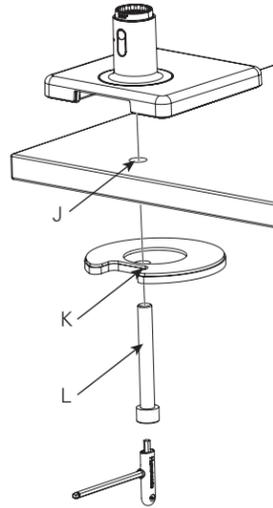

STEP 2: SMART STOP ADJUSTMENT


In each arm connection, there is an adjustable Smart Stop Ring which can be positioned to limit the arm's range of motion. Depending on the orientation of the ring the arms can be set to rotate either 90°, 180°, or 360°. The marked angle will be in the center of the range of motion. The stop rings must be configured in such a way that the dynamic link head does not pass behind the rear edge of the unit.

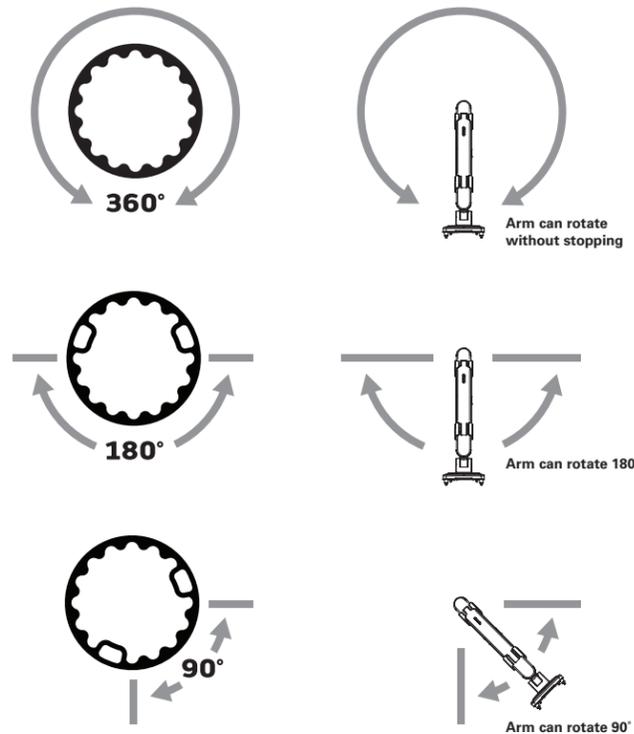

STEP 3: ATTACH ARM TO BASE STEM


NOTE: Before adding each link, adjust the smart stop (A) according to step 2. If using a 3 link configuration, one of the links must be a 4" link. The link installation order may need to be swapped so as to comply with step 2.

- Insert the angled link into the mount until release button locks in place.
- Insert the dynamic link into the angled link until the release button locks in place.
- To remove links, press the release button (B) and lift upward near the joint.

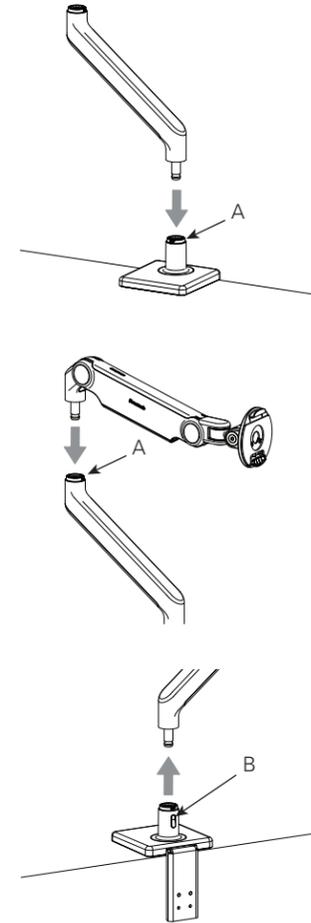

STEP 4: ATTACH VESA BRACKET TO MONITOR

- Separate the VESA cover from the VESA bracket.
- Position the VESA Bracket over the mounting holes on the back of monitor with the D-shaped cutouts in a vertical orientation. Attach using the 4 VESA screws provided.
- Snap the VESA cover back in place.

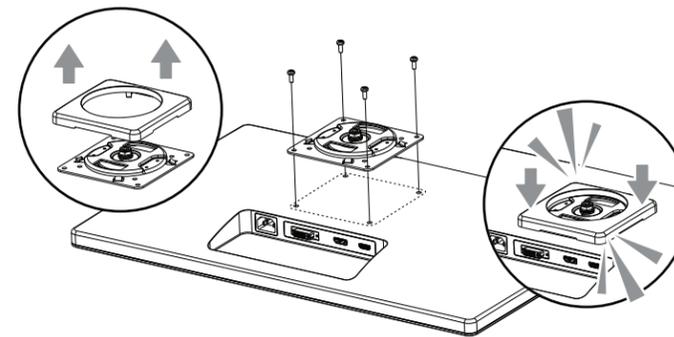


The VESA Bracket features 75mm and 100mm hole patterns. If you need to offset the Bracket from the monitor use the provided Extended VESA screws and Plastic Spacers. You may also use the screws that came with your monitor.

STEP 5: ATTACH MONITOR TO ARM

- Hold the monitor angled back and lower it onto the arm. Fit the hook at the top of the arm into the corresponding cutout in the VESA Bracket.
- Tilt the monitor back upright until the Quick Release Tab (B) on the arm snaps into position.
- To remove the monitor, lift the Quick Release Tab and pull the bottom of the monitor away from the arm, then lift free of the hook.

NOTE: If needed, adjust the tension screw (A) to hold the monitor in position.

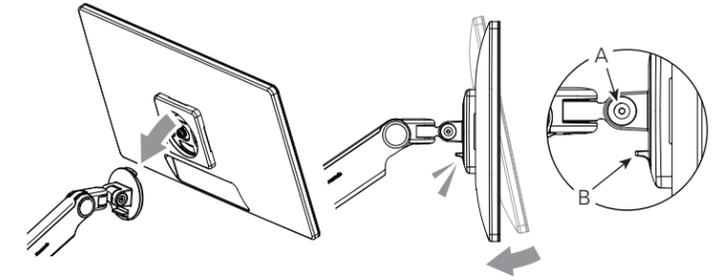

STEP 6: WEIGHT ADJUSTMENT

Your monitor should move up and down easily and stay in place once adjusted. If it is difficult to adjust or moves without assistance, it is not properly balanced.

M2.1: Weight Range: 5.5-15.5 lbs. (2.5-7 kg)

- Press the Upper Arm Link (A) downward until Adjustment Screw (B) is visible.
- If the arm rises up on its own, the lift force is too high and can be decreased by rotating the Adjustment Screw counterclockwise (towards -) with a 4 mm hex key. If the arm falls down with the weight of the monitor, the lift force is too low and can be increased by turning the Adjustment Screw clockwise (towards +).
- The current counterbalance setting can be seen through the counterbalance indicator (C) on top of the upper arm. This information can be used to quickly set multiple arms to the same level without needing the monitors to be installed.

CAUTION: Do not overtighten the screws as it can damage the screw head or threads.

