
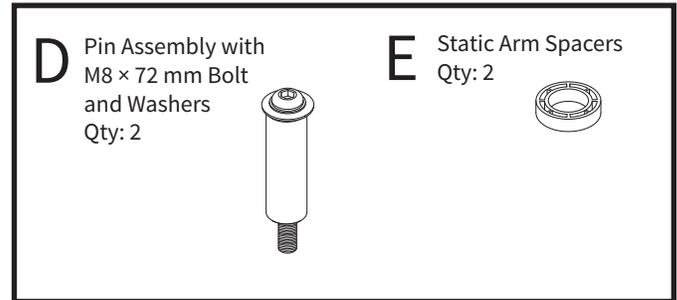
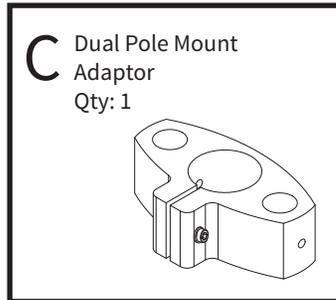


# Assembly & Installation Instructions: Dual Pole Mount Adaptor CONF-ADPT-DPM-S

## Parts Included

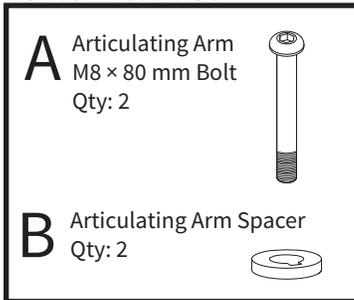

## Required Parts Sold Separately

Conform Monitor Arm.

Selected Pole Base option with mounting hardware.

## Tools Required


Phillips head screwdriver, 2.5 mm Allen Wrench, 5 mm Allen Wrench.



Do not use on hollow core tables.  
Do not rotate or suspend arm (s) beyond table surface.  
Do not exceed 48 lb.

## 1 Attach the Dual Pole Mount Adaptor to Selected Pole Option

- a** Insert Pin Assemblies (D) into Dual Pole Mount Adaptor (C).
- b** Place the Dual Pole Mount Adaptor (C) on selected pole option, at your desired monitor height.
- c** Tighten the clamp screw on the Dual Pole Mount Adaptor (C) with 5 mm Allen Wrench, included with base, to secure Adaptor to Pole.

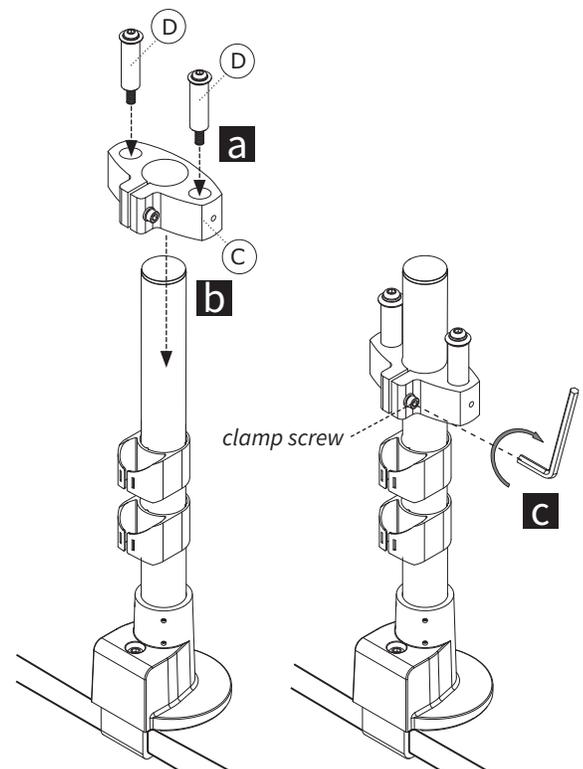

14" Pole shown

## 2 Attach selected Conform Arms to the Dual Pole Mount Adaptor.

- a** Remove Bolt and Washers from Pin Assembly.
- b** Choose the appropriate Spacer for the selected Arm Assembly then place it onto pin.
- c** Place Conform Monitor Arm on Pin, resting on Spacer.
- d** Assemble the Bolt and Washers as shown (M8 x 72 mm Bolt for Static Arm, M8 x 80 mm Bolt for Articulating Arm).
- e** Tighten with 5 mm Allen Wrench, included with base. Be sure the arm is tight but rotates freely.
- f** Tighten the pre-installed set screws with 2.5 mm Allen Wrench, included with base, to lock in place.
- g** Snap on the Pivot Cover cap for your arm.
- h** Repeat the steps above for the second arm.

