

ERGOTRON[®]

Built with Anthro-DNA™

ASSEMBLY INSTRUCTIONS

Zido[®] Base Storage Shelf



Product	Part#
Base Storage Shelf	ZBSSCG


NOTE: The Zido Base Unit is not included.



www.ergotron.com

USA 1-800-325-3841

For the latest User Installation Guide please visit: www.ergotron.com

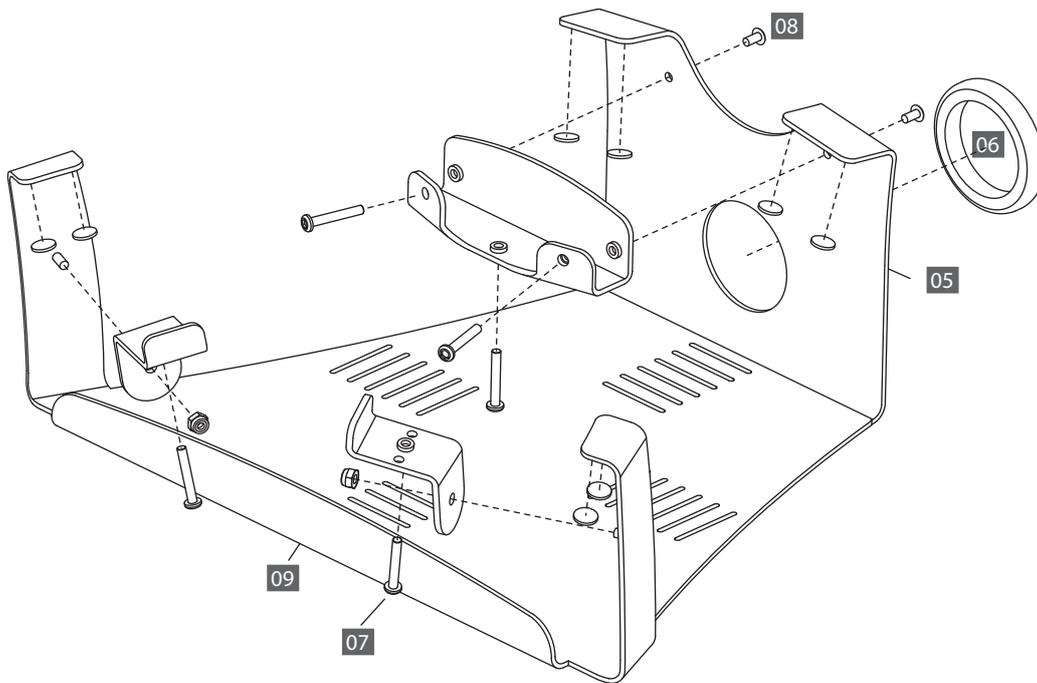

WELCOME

Thank you for purchasing Zido Base Storage Shelf.

If you have any questions or if we can help you in any way, please contact us at 800.325.3841.

PARTS LIST


Before beginning assembly of your Zido Base Storage Shelf, please review the parts list to verify that your shipment is complete.

Product	Quantity	Part Number
01 Base Storage Shelf	1	225-2644-00
02 Rear Clamp	1	225-2645-00
03 Front Clamp X	1	225-2646-00
04 Front Clamp Y	1	225-2647-00
05 Bumpers	8	175-5132-03
06 Grommet	1	175-5327-00
07 1-1/4" Screw	5	325-5183-00
08 3/8" Screw	2	325-5232-00
09 Nylok Nut	2	325-5186-00
10 3-way Wrench (not shown)	1	225-5186-03
11 1/8" Hex Key (not shown)	1	375-5015-00
12 Strap & Buckle Kit (not shown)	1	ZSTRBK

STEP 1

Assemble the Front & Rear Clips


- Insert one 1-1/4" screw through the threaded opening on each Front Clamp. Tighten just enough to see the tip of the fastener come through the top of the threaded opening.
- Insert one 1-1/4" screw through the three threaded openings on the Rear Clamp. Tighten just enough to see the tip of the fastener come through the top of the threaded opening.

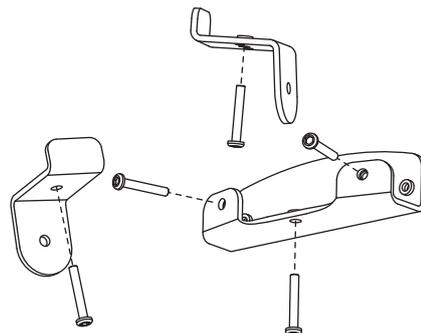

STEP 2

Install the Base Shelf


- Lift the Base Shelf into place under your Zido Base so it hangs by the tabs at the top.
- Install the Rear Clamp onto the Base Shelf. Using the 1/8" hex key, secure with two 3/8" screws.

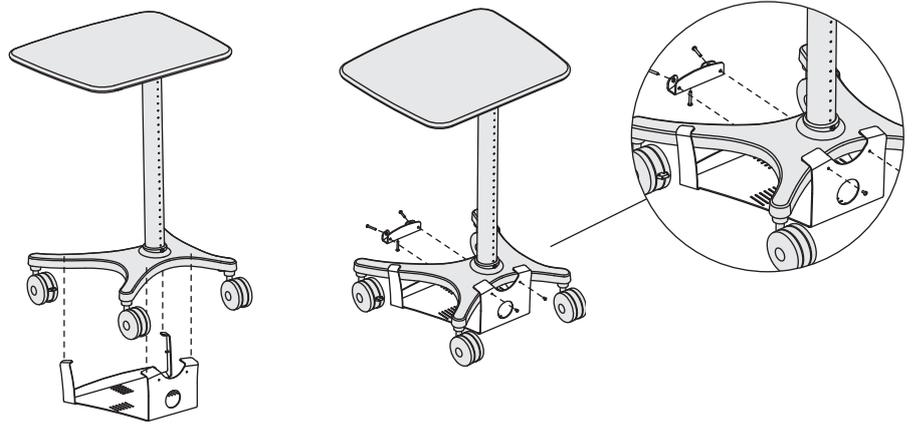

STEP 3

Install the Front Clips

- Install the Front Clamp X (the one with two holes next to the threaded opening) onto the right side of the Base Shelf. Using the 1/8" hex key, tighten the 1-1/4" screw. Using the 3-way wrench or an adjustable wrench, secure with a Nylock Nut.
- Install Front Clip Y (the one with no additional holes next to the threaded opening) onto the left side of the Base Shelf. Using the 1/8" hex key, tighten the 1-1/4" screw. Using the 3-way wrench or an adjustable wrench, secure with a Nylock Nut.

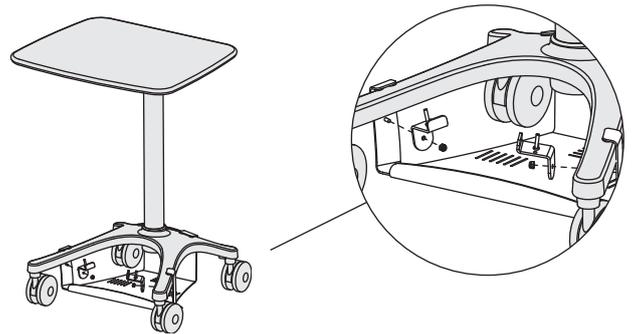

STEP 4

Install the Grommet and Strap & Buckle Kit

- Press the Grommet into place lining the cable pass-through.
- Install the Strap & Buckle Kit using its instructions.

CONGRATULATIONS! YOUR BASE STORAGE SHELF ASSEMBLY IS COMPLETE!

For Warranty visit: www.ergotron.com/warranty

For Service visit: www.ergotron.com

For local customer care phone numbers visit: <http://contact.ergotron.com>

Americas Sales and Corporate Headquarters

1181 Trapp Rd.
St. Paul, MN USA
1-800-325-3841
www.ergotron.com
sales@ergotron.com

ERGOTRON[®]



While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA. Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.

© 2016 Ergotron, Inc. All rights reserved.

All trademarks are the property of their respective companies. Anthro is a registered trademark and brand of Ergotron Inc. Anthro-DNA is a trademark of Ergotron Inc., Ergotron Inc. is a Nortek company.

300-5417-00 rev. C • 10/16